

All engines
with oil bath air filter

Note


Check oil level and amount of dirt in oil bath air filter at every lubrication service. Clean filter if necessary.

In severe dust conditions overhaul filter at **more frequent** intervals.

- Remove complete air filter for cleaning.
- Clean upper and lower parts of air filter.
- Clean filter element with diesel oil or petroleum and blow out with compressed air.

Attention! When cleaning air filter element do not use cotton waste, water, lyes or fluids containing acids.

- Before refitting filter **re-fill with fresh oil** up to upper mark. To do this hold air filter horizontal.

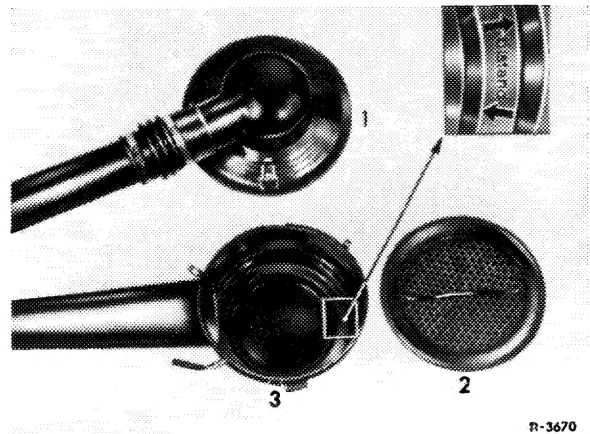

R-3670

